 




### Parts List




**A** x 1  
Controller

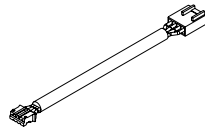

 
**B** x 3  
PWM Cable



 **C** x 1  
Mainboard Signal  
Bridge Cable (ASUS)



 **D** x 1  
Mainboard Signal  
Bridge Cable  
(GIGABYTE)





**E** x 1  
Velcro

### Installation Guide




Please power off the PC and check the Positive and Negative ends on the connector before connecting the cable to mainboard. Connecting the wrong end can damage the controller.

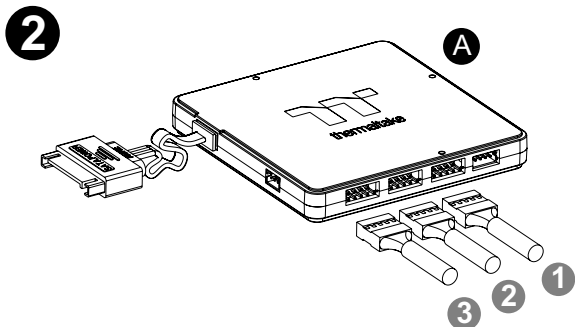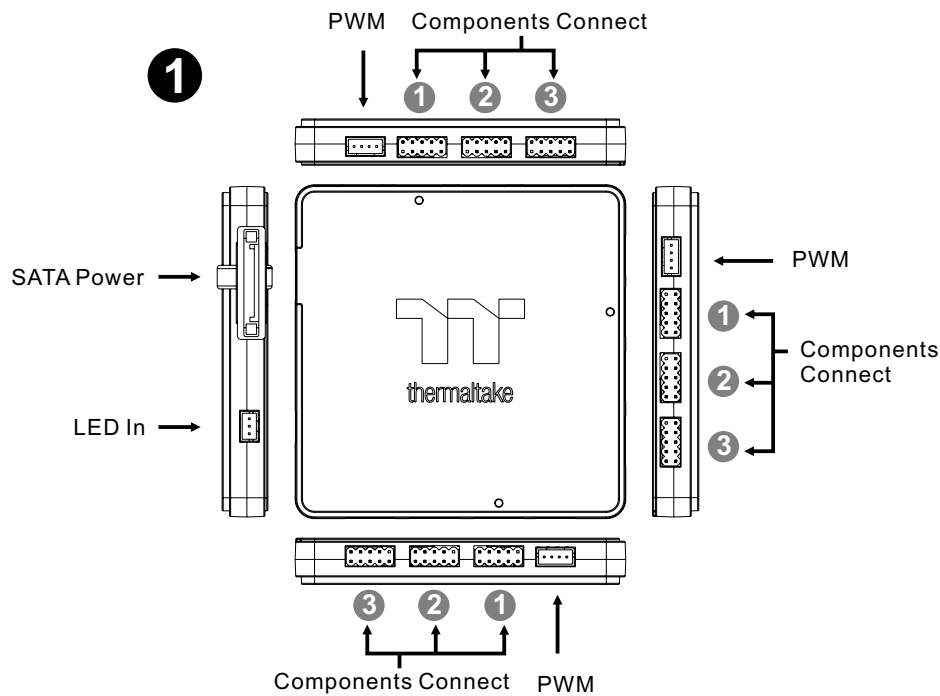

Connect the components cable in numerical order onto the controller, start with port 1. (the dot is port 1)


#### If you are using Lumi Plus

Please connect the other addressable LED devices first, then connect the Lumi Plus at last. Don't forget to connect them in numerical order, start with plug one.

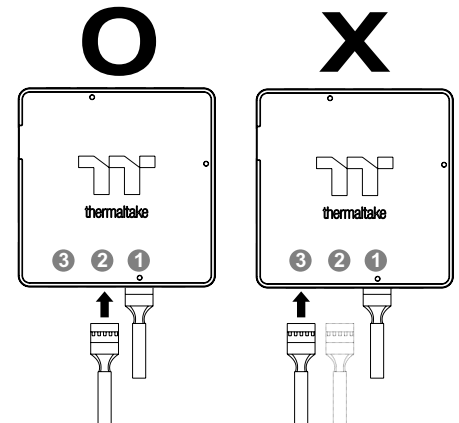


# Installation Guide

3

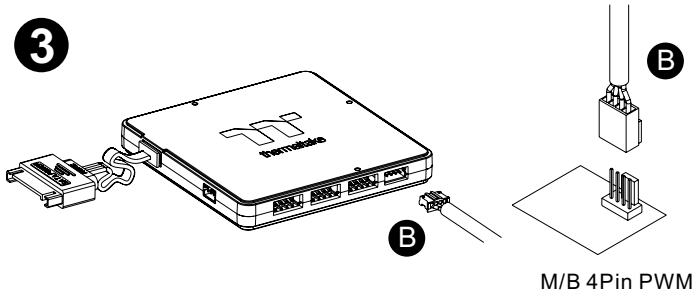

Connect the PWM cable onto the mainboard (4Pin PWM) and controller.


4

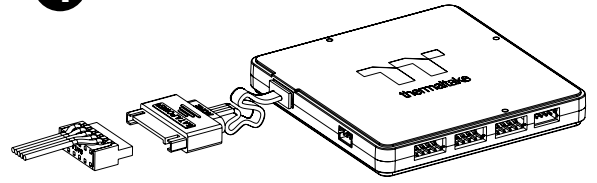


Connect the power cable to the SATA connector and controller.

## If you want more...

If you want to control LED color via mainboard software, you can use the mainboard signal bridge cable to connect the controllers.

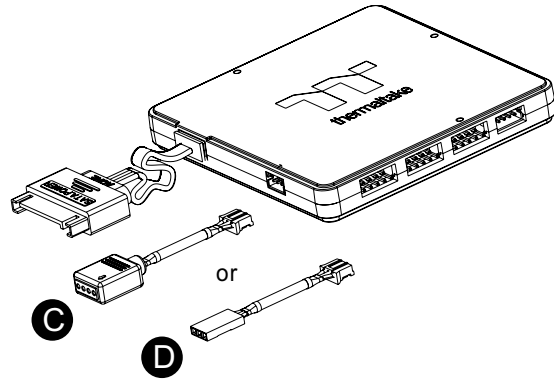


### ASUS

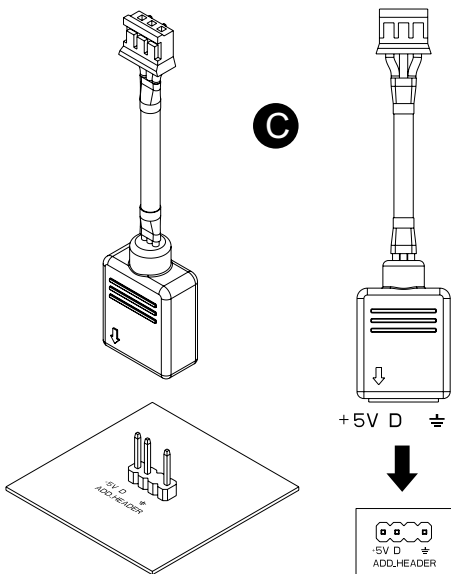

Aura Addressable Strip Header(s)

### GIGABYTE

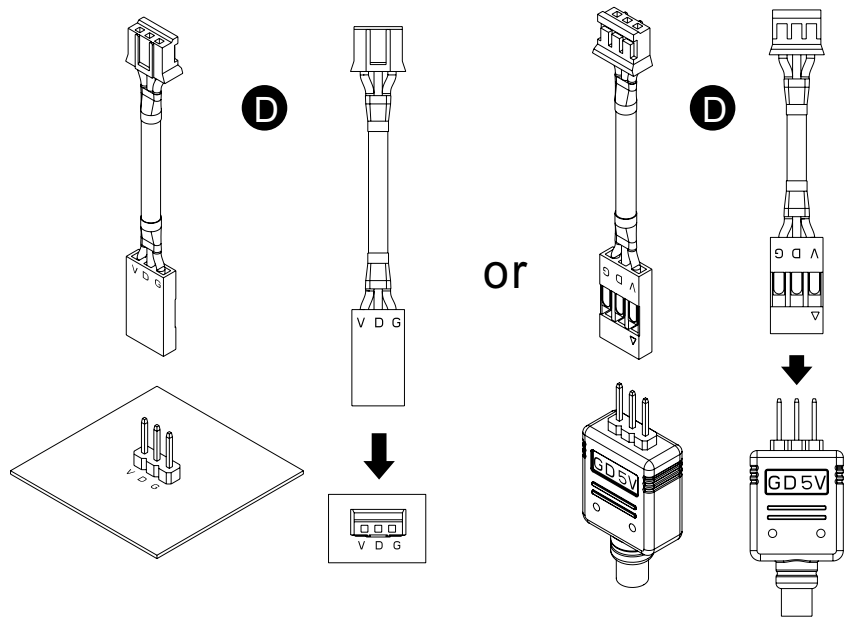

AOURS RGB Fusion with Digital LEDs